

Removal and Replacement of Cylinder Cap & Tailpiece

- 1 No special tool is required.
- 2 Be sure to remove the key!
- 3 Depress the spring-loaded retaining pin and unscrew the cylinder cap.
- 4 Remove the Cylinder Cap & Tailpiece
- 5 Replace the Tailpiece.
- 6 Reinstall the Cap.
- 7 Check to be sure the Retaining Pin has engaged the Cap and it will not turn.
- 8 Check the Function with the Key.
- 9 If it feels too tight, remove the key and loosen the Cap by one notch.
- 10 Re-Test the Function with the Key.

