

PRODUCTS:

- Simple Solution™ Corner Pad - to upgrade existing

TOOLS NEEDED:

- Measuring Tape
- Paper
- Pen

1 Measure the strike margins of the door system.




- Measure the space between your door panel and door frame where the strike plates are installed.
- Write this number down to help align the corner pad in later steps.

2 Remove the paper backing from the corner pad.




3 Align the corner pad vertically.

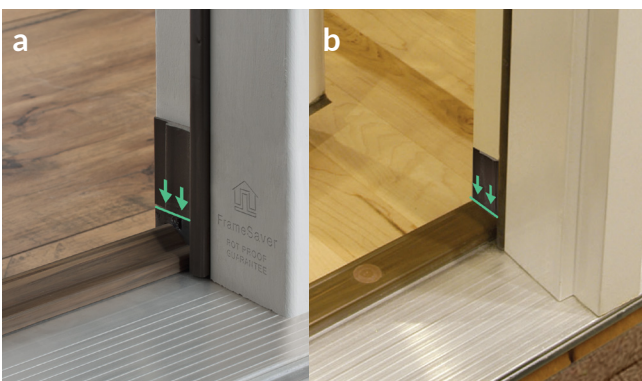

- If you have an Endura Z-Articulating Cap Sill™, align the corner pad flush against the Z-End Base™, or the black stiffener.
- If you have an adjustable cap sill, align the corner pad flush against the top of the cap.

4 Align the corner pad horizontally.

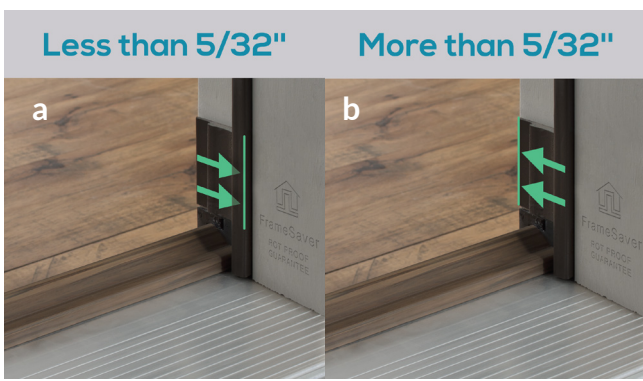

- If your strike margin measurement from Step 1 is **less** than 5/32", align the corner pad with the weatherstrip kerf.
- If your strike margin measurement from Step 1 is **greater** than 5/32", align the corner pad with the interior jamb.

How to Install a Corner Pad

5

Place the corner pad firmly against the jamb.



a. Once you have both the vertical and horizontal alignment set, press the corner pad firmly against the jamb.

6

Repeat installation on the hinge side of the door panel.



- a.** Align the corner pad vertically either on the Z-End Base™ or on the adjustable cap, depending on your sill type.
- b.** Align the corner pad horizontally against the interior jamb regardless of margins.
- c.** Press firmly into place against the jamb.